
Order Form V polymaster.com.au V polymaster.com.au Date: Site Contact name: Distributor: Delivery Address (if not to store): Distributor ID number: Distributor to store):


Distributor ID number:	
	Phone:
Contact name:	Email:
Phone:	Order no. (required)

NO	PRODUCT CODE	DESCRIPTION	COLOUR	QTY	UNIT PRICE (EX.GST)
1					
2					
3					
4					
5					
TOTAL					

ADDITIONAL OPTIONS			SIZE REQUIRED	QTY	UNIT PRICE	AMOUNT
UPGRADE OUTLET?	YES	NO 🗌				
ADDITIONAL OUTLET?	YES	NO 🗌				
MANHOLE COVER INSTEAD OF STRAINER?						
ACCESSORIES REQUIRED?	YES	NO 🗌				

FILL IN ADDITIONAL DETAILS BELOW FOR TANK ORDERS ONLY - SELECT FITTING POSITIONS

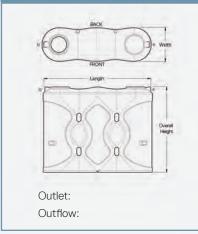

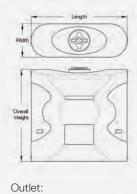

Outflow:



* Minimum order \$300

* Tank specs available at **polymaster.com.au**

Email to sales@polymaster.com.au to place your order

Disclaimer: Colours and sizes may vary from details printed

Delivery & Installation

It is the owner's responsibility to provide clear access to site, and to secure tank/s left at site.

If the driver cannot reach the location, the tank/s will be left at the closest practical & safe position at the driver's discretion. If a tank can not be left at site, the owner will incur a redelivery charge.

All products can be delivered throughout Australia. Call us for a quote for deliveries outside nominated zones.

Nominated Zones Free Delivery

Polymaster offers free delivery to site throughout most of Victoria, South Australia and parts of Southern New South Wales for tanks exceeding 13,000ltrs (remote areas excluded). Please refer to our free delivery zone map on polymaster.com.au/delivery-installation.

All tanks less than 13,000ltrs are delivered free to store (within the nominated zone). A delivery fee will be incurred to deliver these tanks to site.

Delivery Requirements

Clearance required for truck and trailer is 19m long, 5m high, 3.5m wide. To put this into perspective, our trucks are longer than a semi-trailer.

In accordance with OH&S requirements, the customer must be present at the time of delivery. If this is not possible, arrangement must be made with the distributor, friends or neighbours to ensure truck driver will have the necessary assistance as listed below.

Up to 13,500ltrs	13,500-22,500ltrs	31,700ltrs	50,000ltrs
1 person	2 person	3 person	1 person
(+driver)	(+driver)	(+driver)	(+driver)

Note:

- It is the Owners responsibility to position the tank on the pad and to connect the tank.
- Please refer to lifting instructions (Polymaster.com.au/deliveryinstallation) for tanks greater than 25,000ltrs as lifting equipment will be required to position on the pad by the Owner.

Underground and Septic Tanks will require a lifting device (forklift etc) to unload from the truck. This is not supplied by the driver.

Re-Scheduling Fee

Please be advised that if the Owner chooses to change the delivery date a re-scheduling fee will be incurred.

Installation Guide

Entry to tank is not required when installing a Polymaster tank!

The tank site must be firm, level and flat.

A concrete pad (min dia. of tank), or well compacted sand base or other consolidated fill such as crushed dust is recommended. This fill must be free of any rocks, stones or any sharp objects.

The sand base or other consolidated fill base must be 75mm - 100mm deep and at least 600mm larger in diameter than the tank base. The outside of the base must be supported by a retaining wall to prevent erosion.

The overflow must be piped well clear of the tank to avoid any undermining of the tank base.

Ensure that a flexible hose of at least 300 mm (12") is installed after the tank valve to absorb any shocks or movement.

If tank is placed on a stand, support pipework off the stand, never support pipework off the tank.



Note: Failure to properly install tank as per instructions will void warranty. Never enter a tank alone. Have an attendant stand by. Restricted Space - only enter after carrying out a Hazard Identification Risk Assessment (H.I.R.A.).